 
 


Assembly Guide

E4351 / E4352 Book Tower midi E4353 / E4354 Book Tower maxi

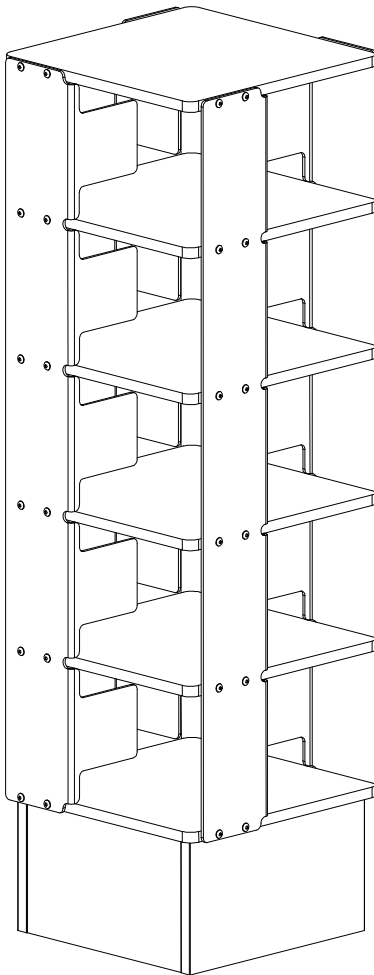

E4351 / E4352

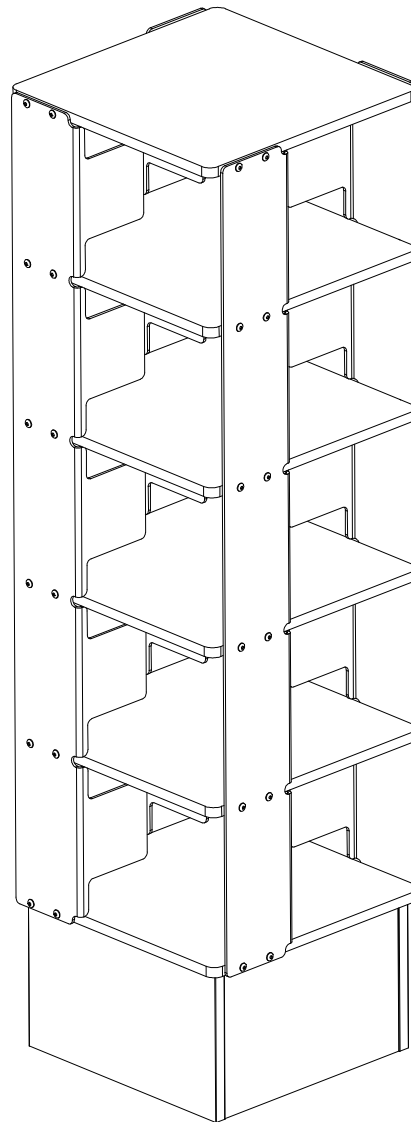

 
E4353 / E4354

2018.10

First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.
Assemble your furniture step by step, as shown in the illustrations.

Assembly Guide

E4351 / E4352 Book Tower midi

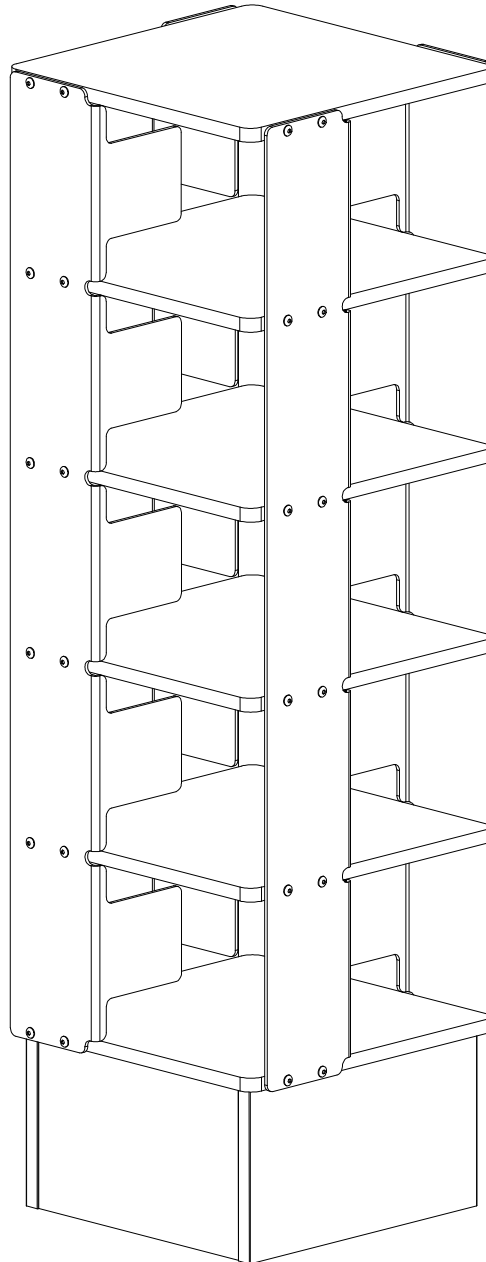


2018.10

First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.
Assemble your furniture step by step, as shown in the illustrations.



 
48 x A
E34193



12 x B
E5203



 
12 x C
E990025




8 x D
E990029



 
48 x E
E43531




48 x F
E990030

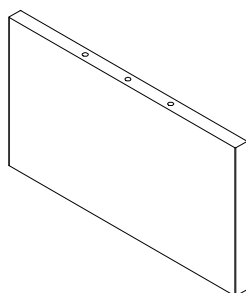 


2 x G
E435112

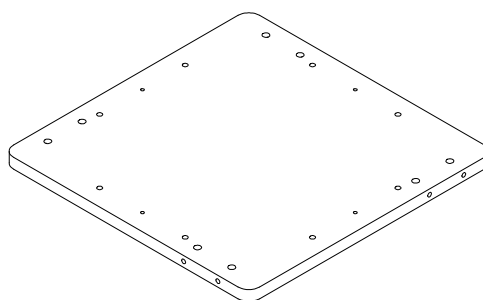 


1 x I
E435113

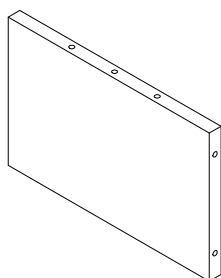 



2 x H
E435111


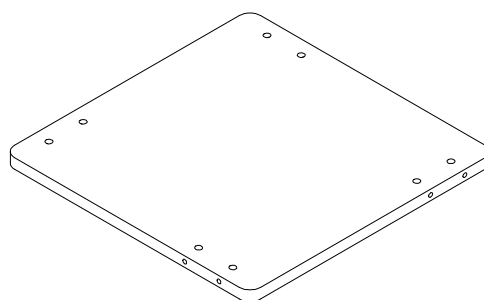 



5 x J
E435114

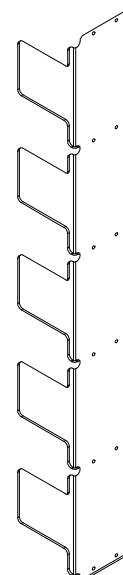 



4 x K
E435120

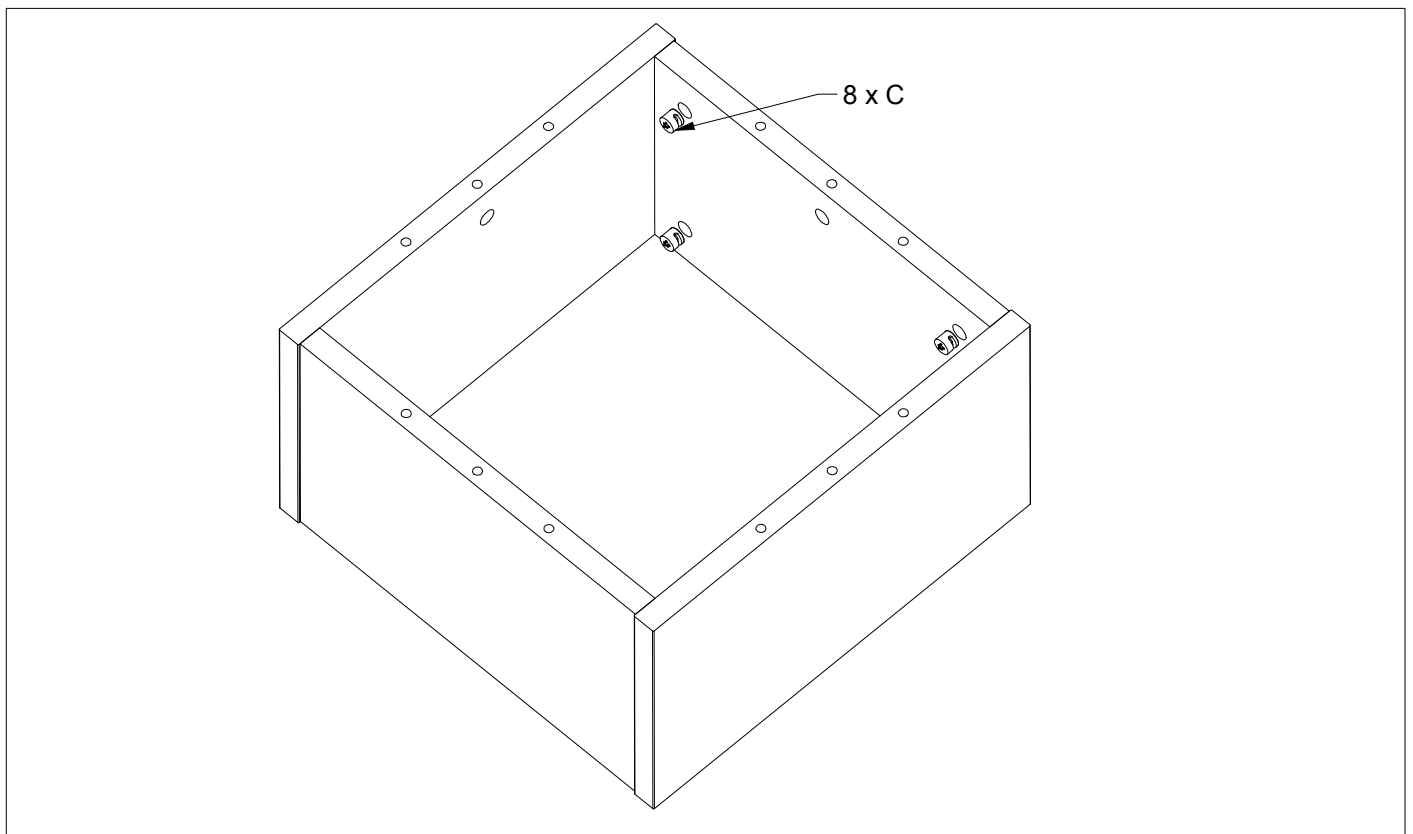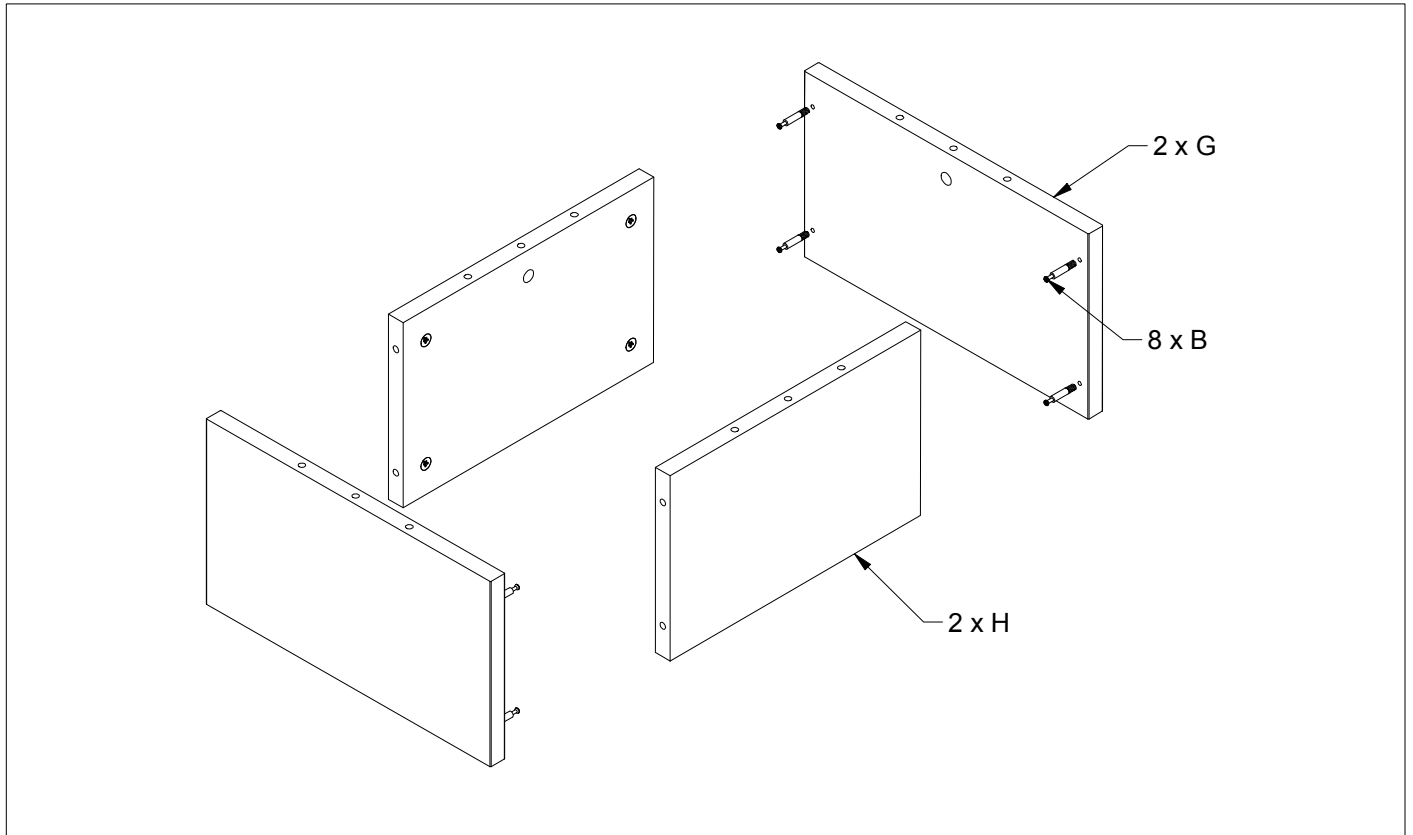  


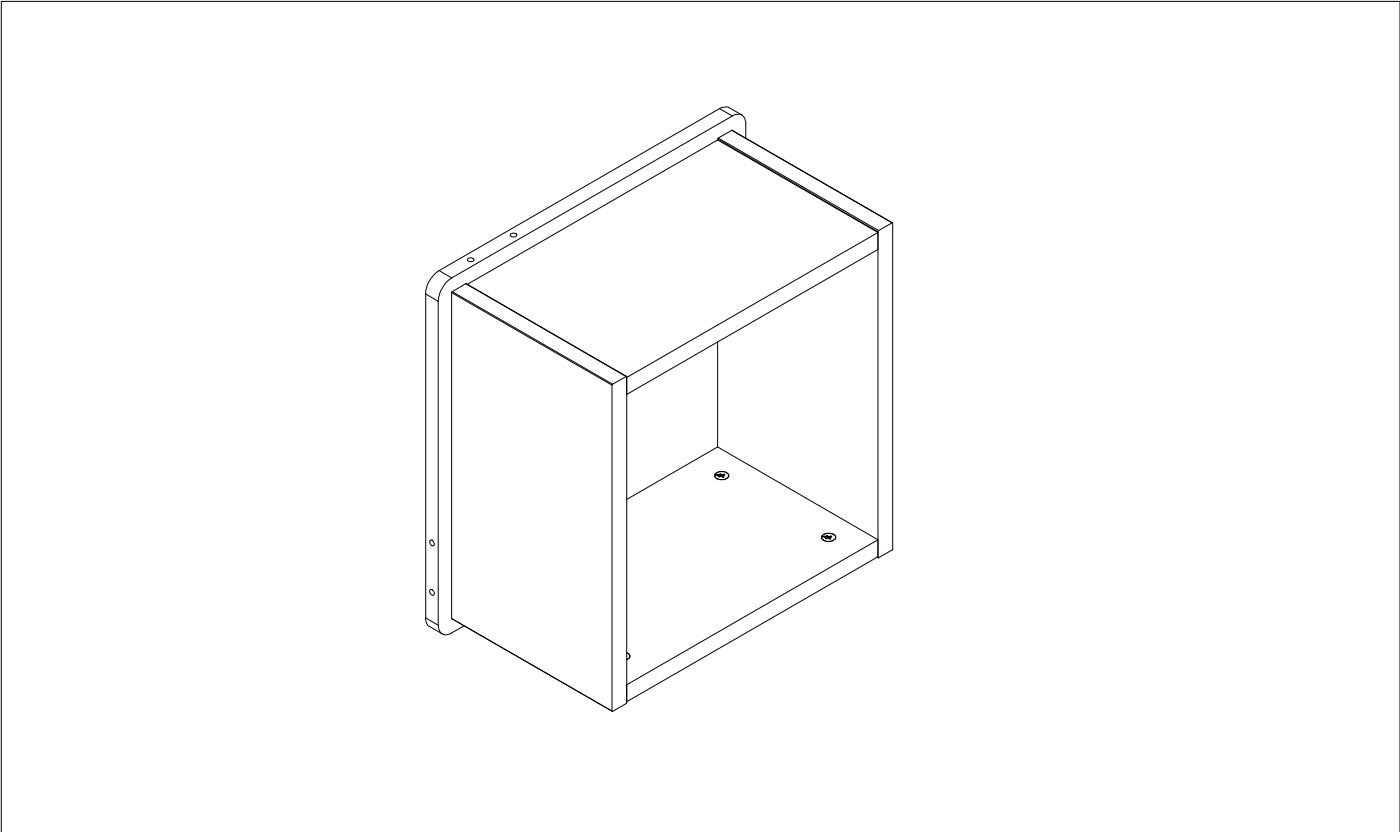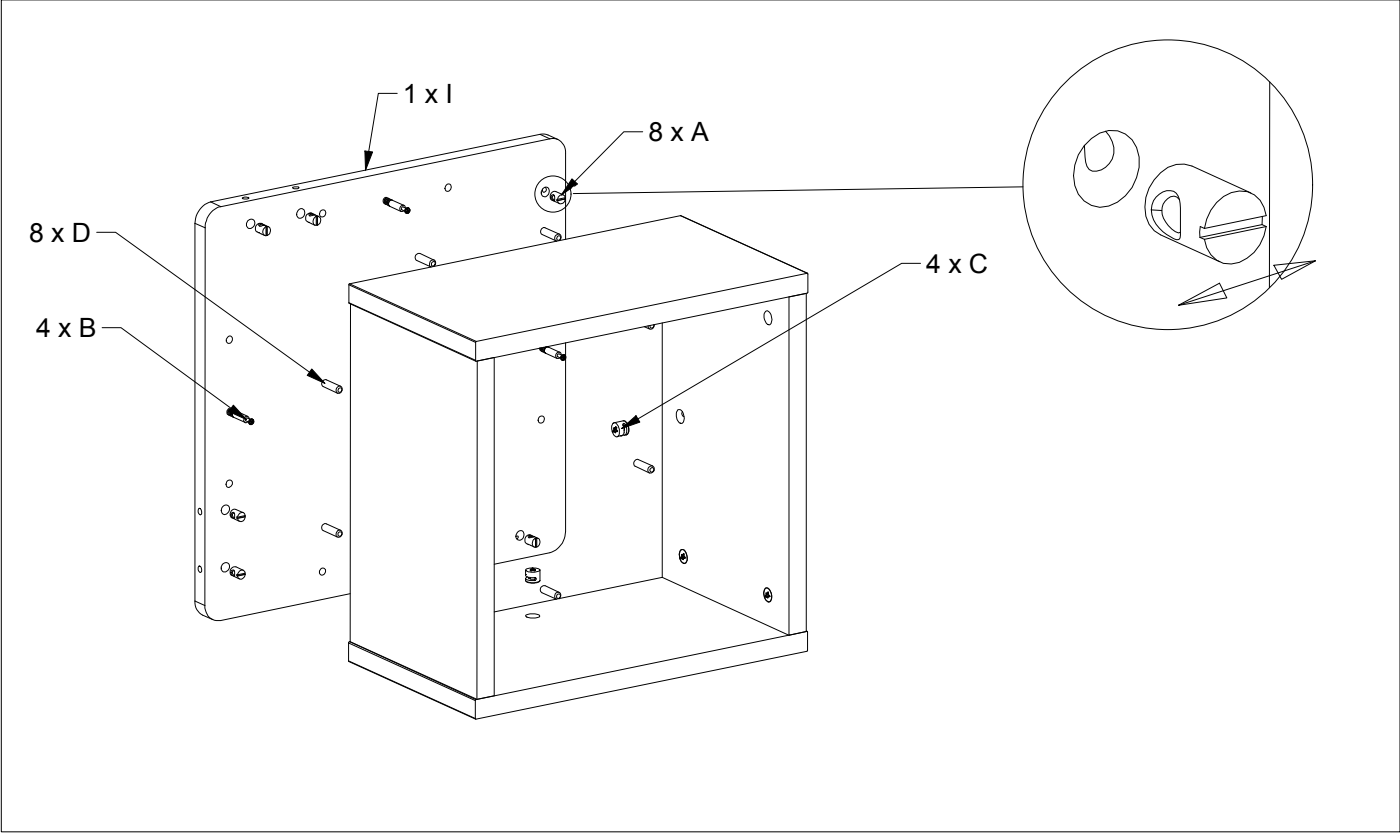  

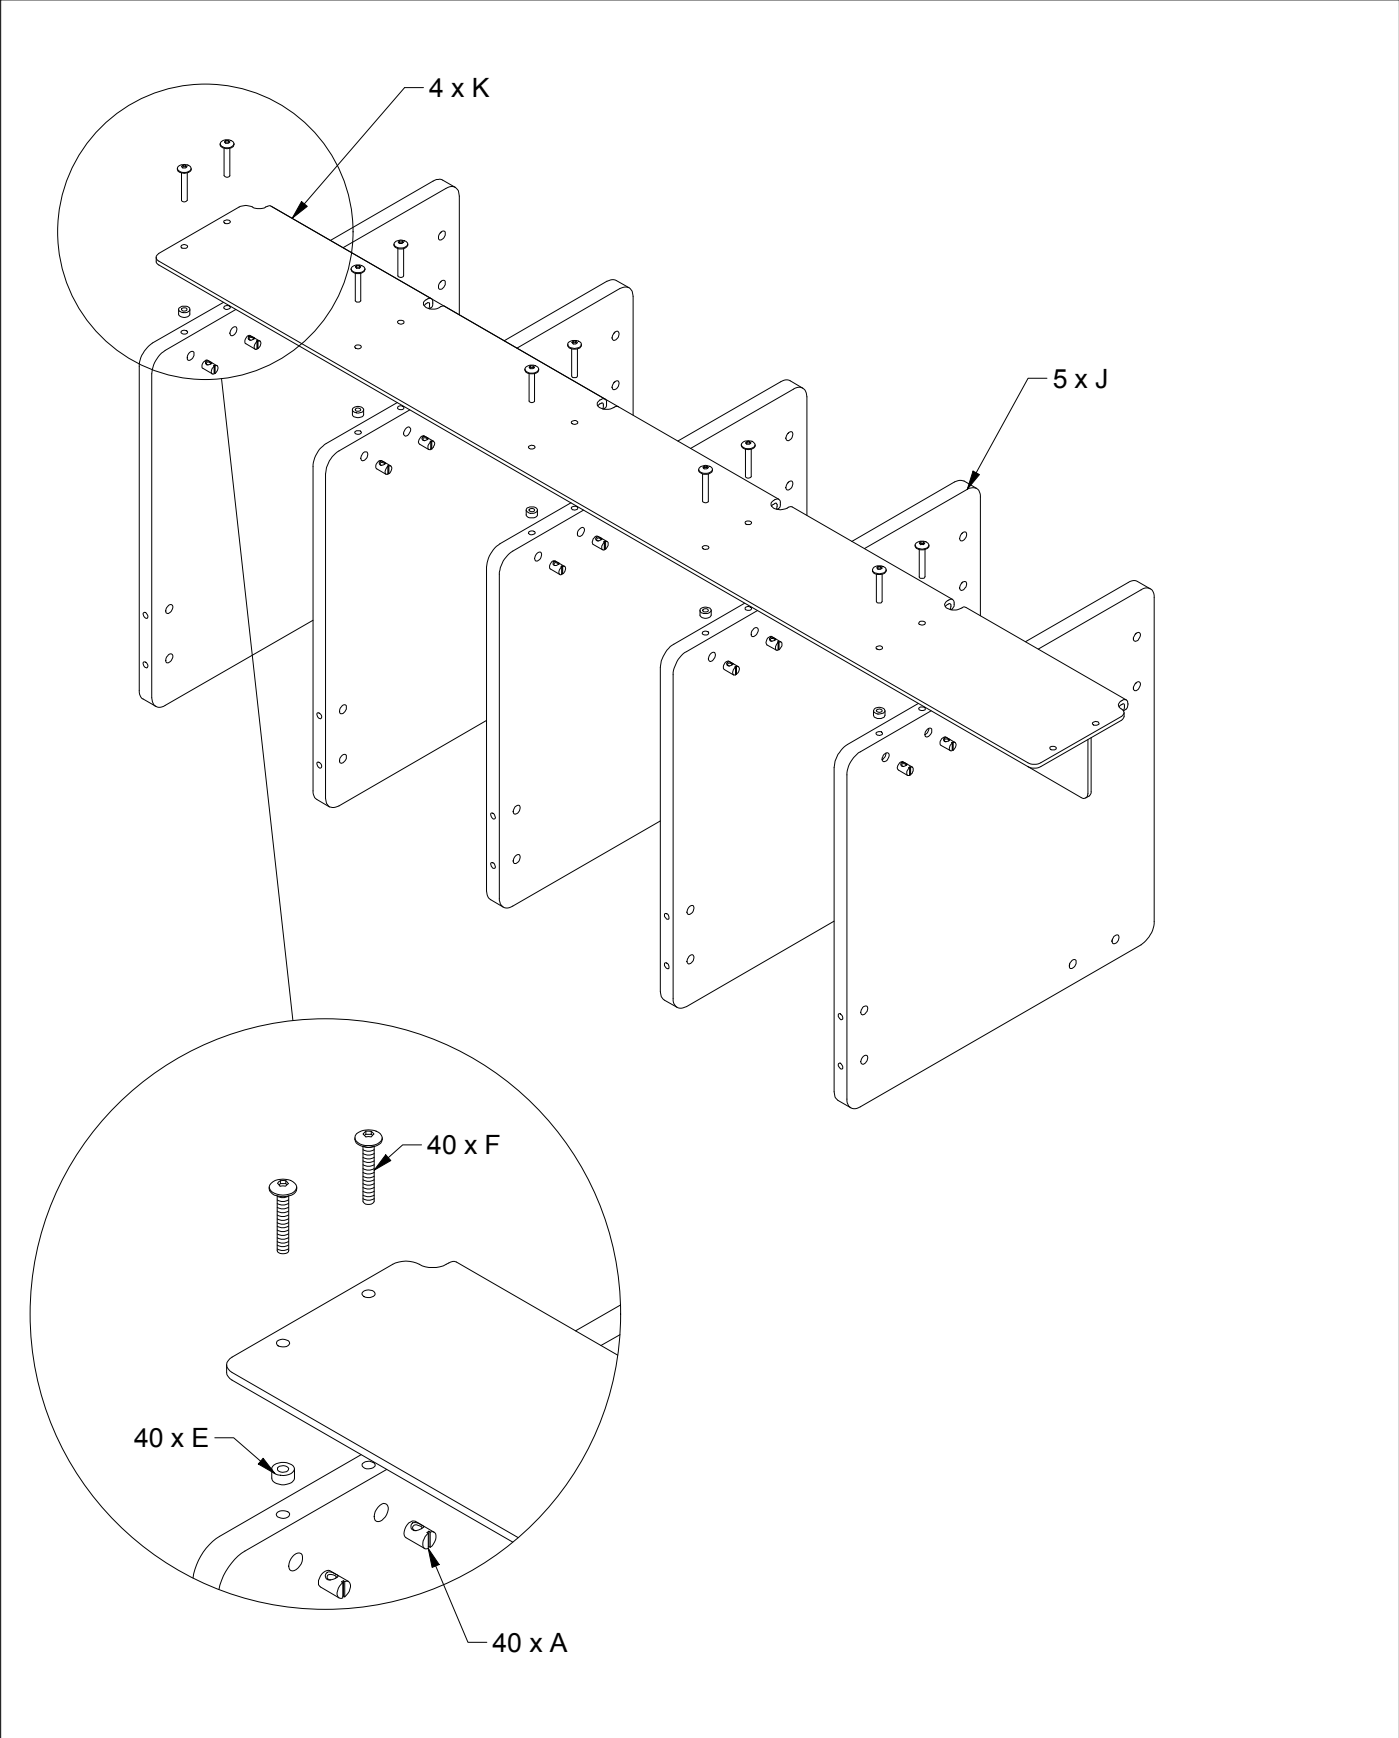 

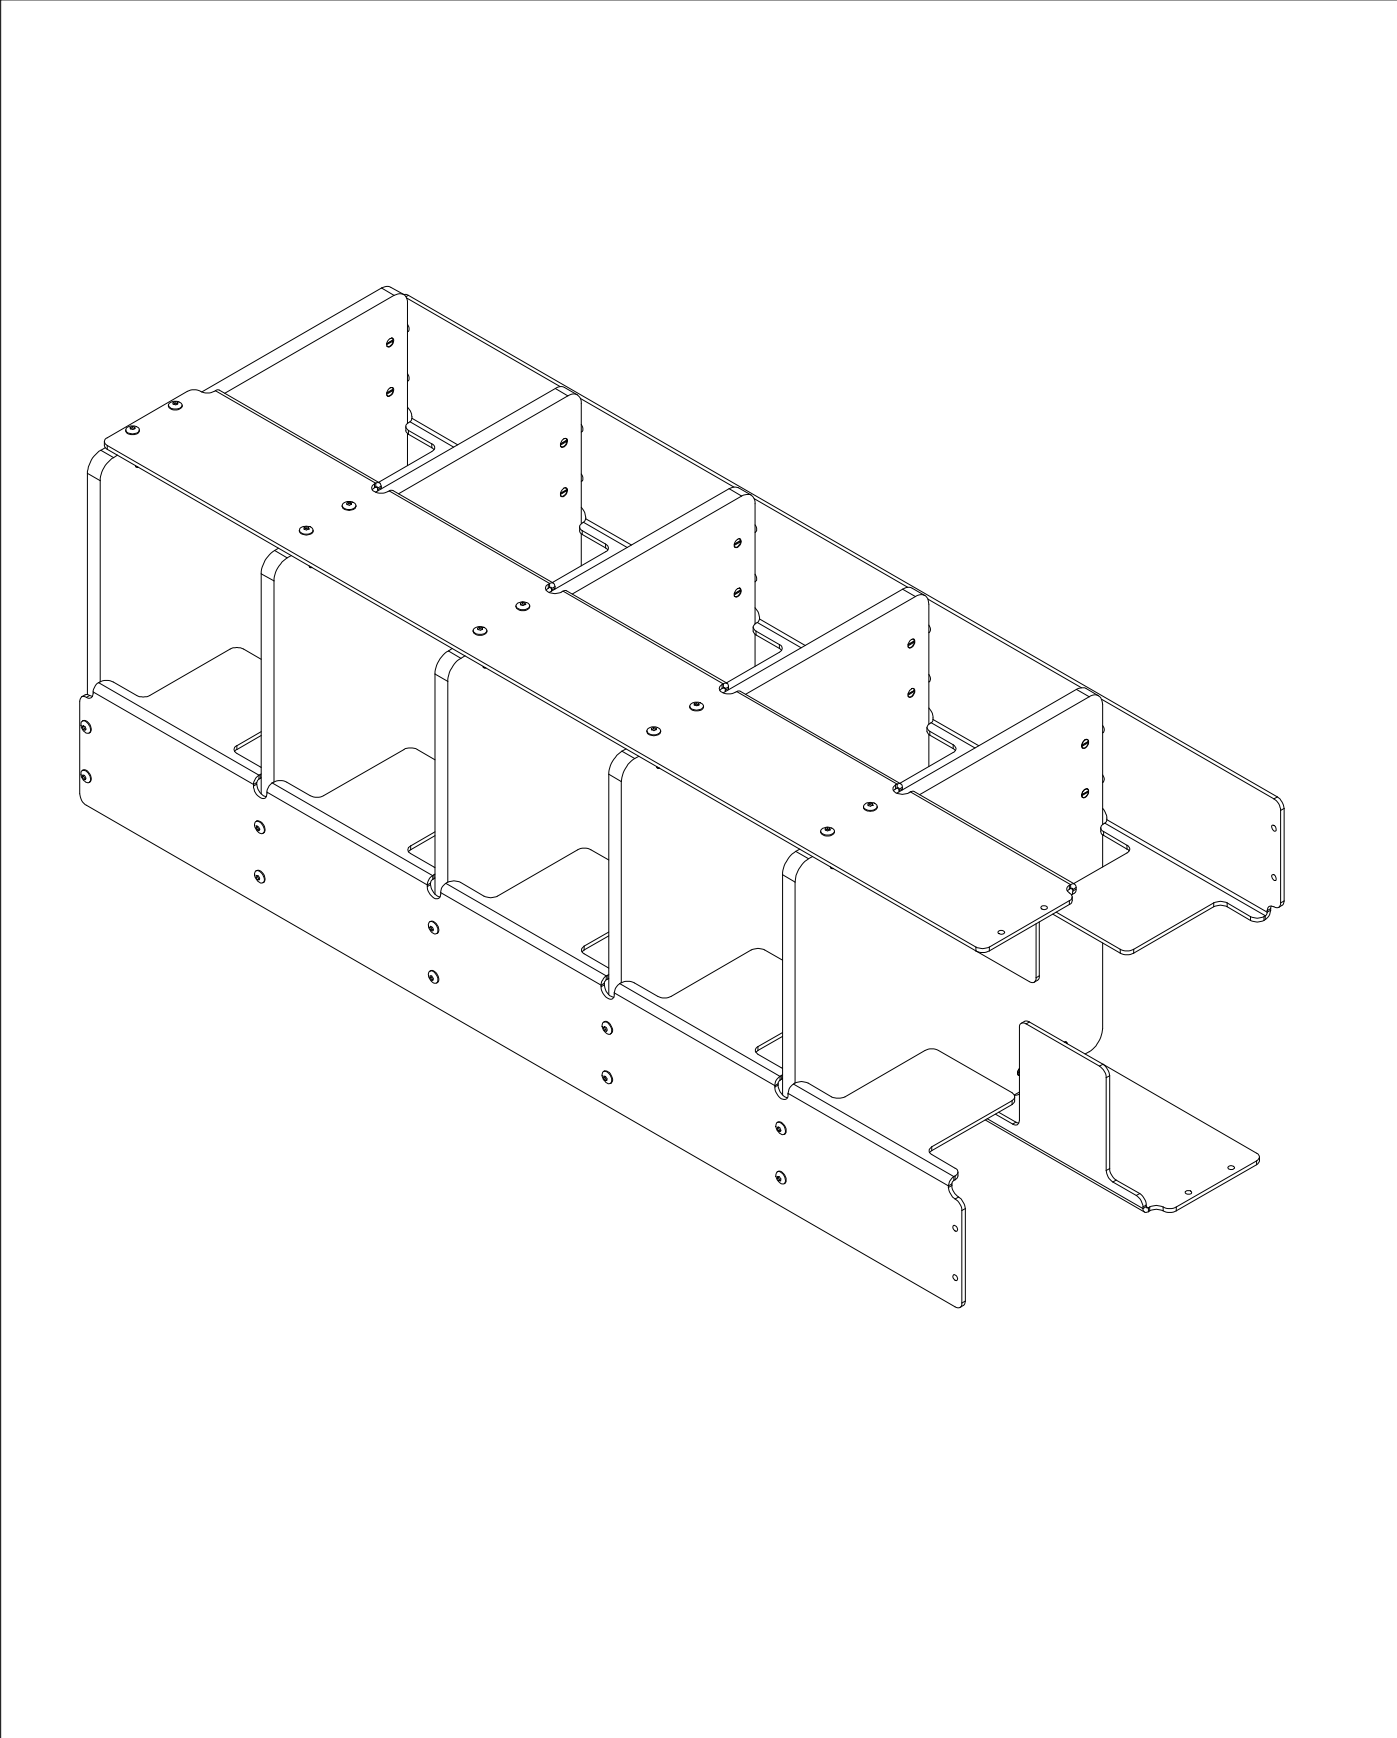 


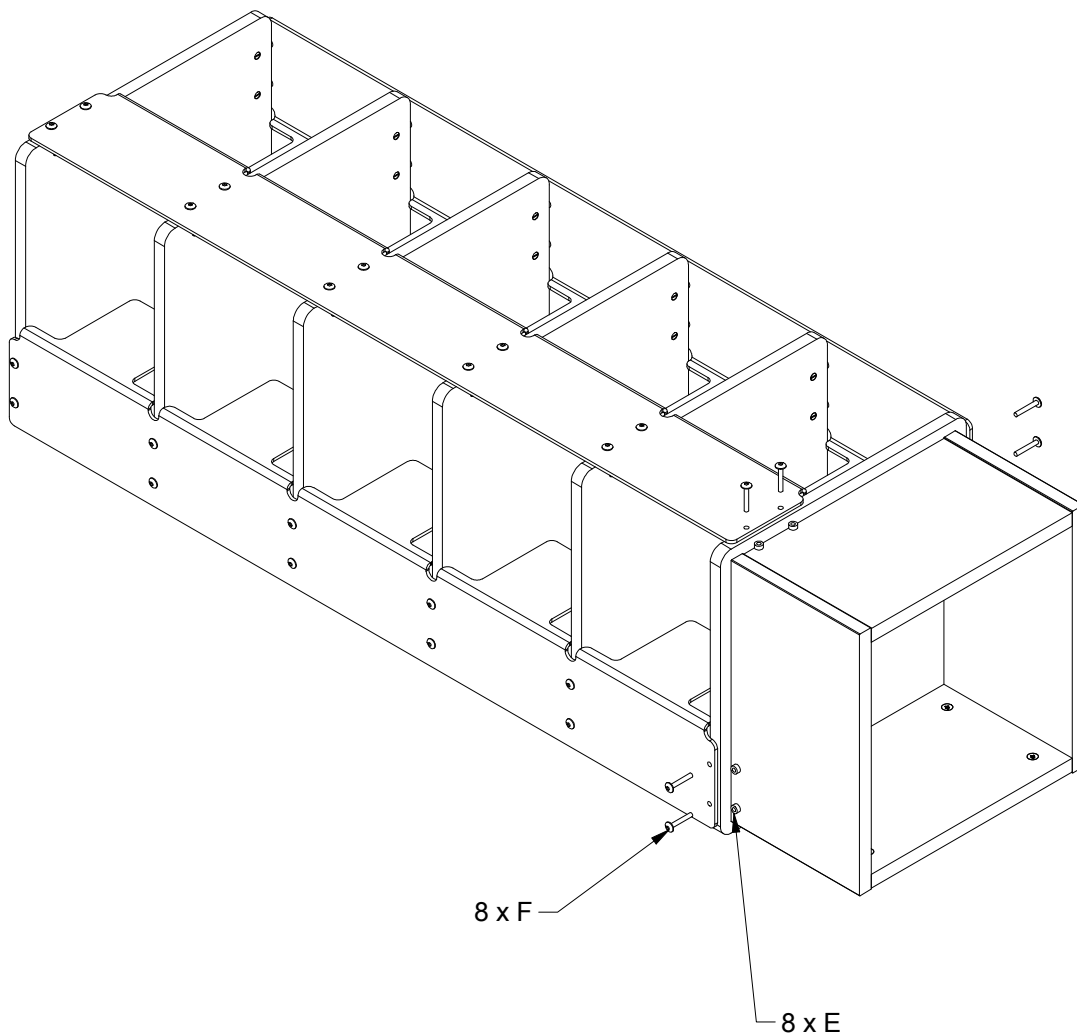  

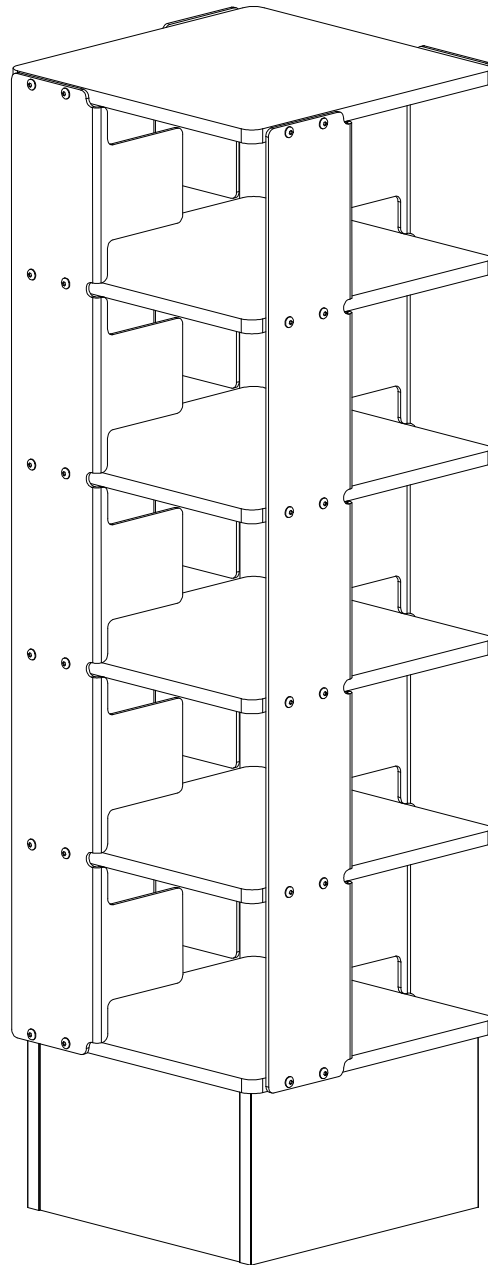

Assembly Guide

 E4353 / E4354 Book Tower maxi

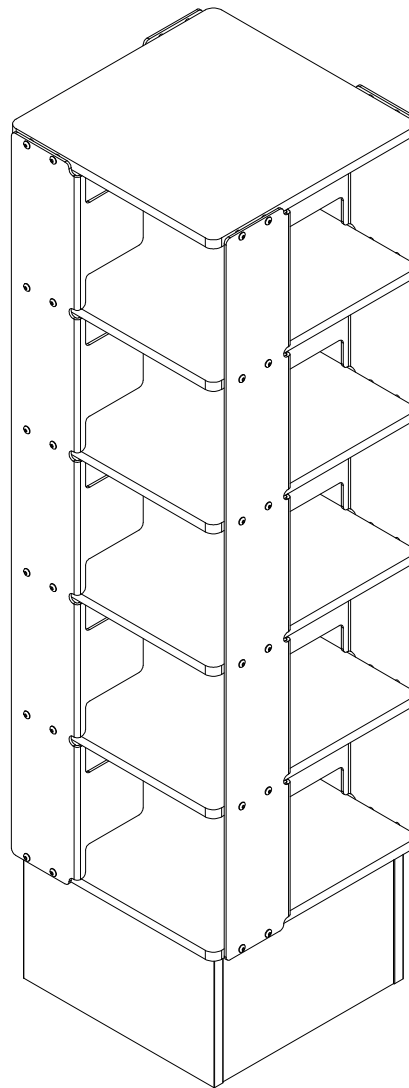


2018.10

First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.
Assemble your furniture step by step, as shown in the illustrations.



 
48 x A
E34193



12 x B
E5203



 
12 x C
E9900025




8 x D
E9900029



 
48 x E
E43531




48 x F
E9900030

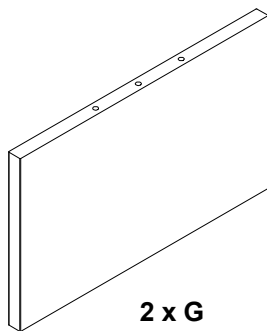 


2 x G
E435112

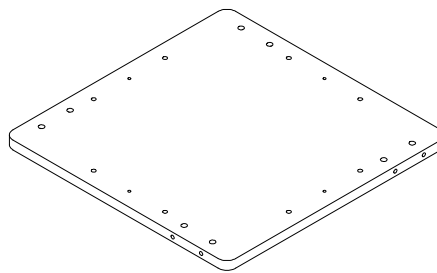 


1 x I
E435313

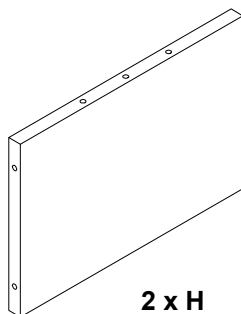 

2 x H
E435111

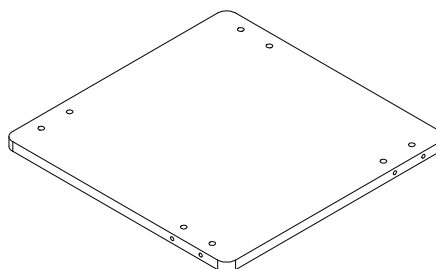 

5 x J
E435314

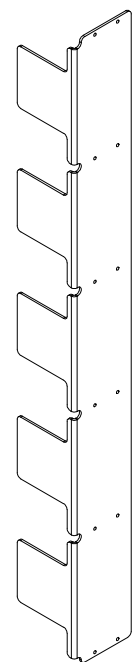 

4 x K
E435320

